

Height Adjustable Tables

Manual

If you have any issues with height adjustable tables, please follow the directions below to reset the table back to its factory settings. Else, contact Nita Yack to request a repair.

Reset the control unit to factory settings

To reset the control unit to factory settings, re-initialize the table.

1. Unplug the table for 15 seconds. Plug in the table
2. Press and hold the UP and DOWN buttons simultaneously for more than 3 seconds. — The legs will begin to move down at half speed of normal operation.
3. Continue to press the UP and DOWN buttons. — The legs will move down to the lowest position, then rebound 1/16" to 3/16" (2mm to 5mm) and stop.
4. Release the UP and DOWN buttons at the same time. This completes the initialization procedure.

From:

<https://howto.cs.uchicago.edu/> - **How do I?**

Permanent link:

<https://howto.cs.uchicago.edu/jcl:desks>

Last update: **2021/10/11 13:29**

