

Height Adjustable Tables

Manual

If you have any issues with height adjustable tables, please try the following:

Reset the control unit to factory settings

To reset the control unit to factory settings, re-initialize the table.

1. Unplug the table for 15 seconds. Plug in the table
2. Press and hold the UP and DOWN buttons simultaneously for more than 3 seconds. — The legs will begin to move down at half speed of normal operation.
3. Continue to press the UP and DOWN buttons. — The legs will move down to the lowest position, then rebound 1/16" to 3/16" (2mm to 5mm) and stop.
4. Release the UP and DOWN buttons at the same time. This completes the initialization procedure.

From:

<https://howto.cs.uchicago.edu/> - **How do I?**

Permanent link:

<https://howto.cs.uchicago.edu/jcl:desks?rev=1535478708>

Last update: **2018/08/28 12:51**

